GMTC





2.3 Güç Bağlantıları

Güç kaynağı kabloları için lütfen güvenlik şartnamelerine uygun olan dielektrik değere ve akım değerlerine sahip kablolar seçiniz. Kablo bağlantı uçları aşağıdaki gibidir.

3.Bağlantı Arayüzü

3.1 Güç beslemesi ve Seri bağlantı portu

Güç beslemesi ve seri port aşağıda gösterildiği gibi aynı soketi kullanır



Pin	Signal	COM0:RS485	COM2:RS232
1	24V_PWR		
2	24V_GND		
3	PC/PLC_TXD		RS232 Send
4	PC/PLC_RXD		RS232 Receive
5	GND		Signal Ground
6	RX-(B)	Rs485 B	
7	RX+(A)	Rs485 A	

Not:İki adet haberleşme portu vardır. Com0 RS485 ve Com2 RS232 şeklindedir. Com2 portu aynı zamanda PC den program yükleme amacı ile de kullanılır.

3.2 USB HOST

BU port genle olarak açılış logosu, kullanıcı konfigürayonu upload ve download, reçete ve kayıtlı data yüklemelri için kullanılır.

4.İşletim Modu

4.1 İşletim mode seçim penceresime giriş

Cihaza enerji verilmeden önce ekrana basılı tutulup enerji verildiğinde seçim penceresi görünecektir.

4.2 İşletim mode seçim penceresi modları

System Setup: Bu menüden açılış penceresi numarası, screen saver zamanı, buzzer actik pasif ,parlalklık gibi ayarlamalar yapabilirsniz.

1.1 Çevre Şartları

Cihazın montajı yapılırken, AC güç kablolarının, PLC çıkış modüllerinin, kontaktörlerin, rölelerin ve buna benzer diğer elektriksel birimlerin cihazın arka bölgesinden uzakta olmasına özen gösterilmelidir.

Koruma Sınııfı: Ön–Arka Tam Kasa IP65 (4208-93)

A	Doğrudan güneş ışığının alındığı		A		Elektriksel, elektro	statik veya
	Hızlı sıcaklık değişiminin veya yüksek nemin				elektromanyetik	gürültünün
	olduğu				bulunduğu	
	Patlama tehlikesi olan			>	Güç kayanağına ya	akın
	Yanıcı gazların bulunduğu		0	rta	mlarda ekranlama ya	apınız.
	Buharlı ve tozlu					
 Sarsıntılı veya titreşimli 						
ortamlarda kullanmavınız						

1.2 Güç Gereksinimleri

- Giriş Gerilimi: 12~28VDC;
- Ürün ve konverterler veya kesintisiz güç kaynağı arasında yeterli mesafe olmalıdır. Bu \geq tarz cihazların giriş çıkışlarında ekranlı kablo kullanıldığına ve bunların da topraklama hattına bağlı olduğuna emin olunuz
- DC kaynaklar ana AC güç kaynağından izole edilmelidir. . \geq
- Sürekli yük veya kontrol cihazının giriş devresi ile ortak güç kullanmayınız. \geq



İçerdeki sigorta aşırı gerilim durumunda cihazın zarar görmesini önleyecektir. Ancak, içerdeki elektronik parçaların zarar görmeyeceği garanti edilmemektedir.

2.Montaj Açıklamaları

2.1 Motaj açıklamaları

VESA standartlarına uygun 4 montaj deliği 070WP için 75mm*75mm, 101WP için 100mm*100mm

dir.

2.2 Ebatlar (mm)



Firmware Update: Firmware güncelleme için kullanılan bu menu bilinçli kullanılmalıdır.

Touch Calibration: Dokunmatik ekran kalibrasyonu menüsüdr.

Stop timer: 20s lik zamanlayıcıyı durdurmak için kullanılar. Zamanlayıcı herhnagi birr işlme

yapılamdığ zman bekleme süresidir

GMT Endüstriyel Elektronik San. ve Tic. Ltd. Şti. Çubuklu Mah. Boğaziçi Cad. Boğaziçi Plaza no:6/B 34805 Beykoz İstanbul Turkey Tel : +90 216 668 0006 Pbx. Fax: +90 216 668 0008 url: www.gmtcontrol.com

GMT()





2. 3 Power Connection

Before connecting the power, please make sure all local and national electrical standards are met. For power cables, please select cables with these specifications: overall diameter 6.--8.3mm, 7 cable cores, the internal cable cores should be 22AWG or above. The power cable is welded to WF-16 connector. The definition of the WF-16 connector is as shown in chapter 3.1. In the picture, 24V_PWR is connected to DC24V,and 24V_GND is connected to 0V.

3.External Interface

3.1 Power Supply&Serial Port

The power supply and serial port use the same connector, as shown in following picture.

	Pin	Signal	COM0:RS485	COM2:RS232
	1	24V_PWR		
	2	24V_GND		
ò o)	3	PC/PLC_TXD		RS232 Send
$a a^3$	4	PC/PLC_RXD		RS232 Receiv
	5	GND		Signal Ground
	6	RX-(B)	Rs485 B	
	7	RX+(A)	Rs485 A	

Note: There are two communication ports. One is COM0, it supports RS485. The other one is COM2 which is used for RS232 communication and downloading project.

3.2 USB HOST

This interface is mainly used for importing initial LOGO, user's configuration uploading/ downloading, recipe data import/export and historical data export.

4.Operation Mode

4.1 Instructions for entering Operation Mode selection window

Press and hold the touch panel before power on HMI, then power on HMI. Release your help after HMI enter operation mode selection window, then select the operation mode. If no any operation in 20s after entering operation mode selection window,HMI will enter application mode automatically.

1.1 Environmental Requirement

Please make sure that AC power, PLC output modules, starters, relays and other types of electrical interface device are far away from the back of this product.

Degree of Protection: IP65(4208-93) whole body

Please do not use in the following places:		Ple me	ase take shielding asures in the following
≻	Places direct in sunlight	places:	
۶	Surroundingtemperature and humidity beyond the specifications		Places that exist electrostatic or other kinds of noise
۶	Places of temperature changes sharply and easily cause condensation	>	Places of strong electromagnetic
۶	Places that exist corrosive gas and combustible gas	۶	Places that may be exposed to

1.2 Power Requirement

- Input voltage: 18~28VDC;
- \mathbf{F} Particularly note that there must be enough distance between this product and converters or switch mode power supply. Make sure that the input and output cables of that kind equipment are shield cable and the shielding network is connected with the ground.
- Make sure that the DC power and AC power is isolated.
- Do not use common power with perceptual load or input circuit of the controller.



Chassis ground must be used.

2.Installation Description

2.1 Installation Instructions

It uses bracket installation which is compatible with VESA standard. The 4 installation holes for 070WP is 75mm*75mm,and for 101WP is 100mm*100mm,the installation holes distance is as shown in

chapter 2.2.

2.2 Dimensional Drawing (mm)



4.2 Descriptions of functions in Operation Mode selection window

After entering operation mode selection window, it will popup a menu. Follows are the descriptions of the functions in the menu:

System Setup: Press this button to enter system setup window. This window is used to set initial window,screen saver time,buzzer and brightness adjustment.After setting,press Restart button to restart HMI.

Firmware Update: Press this button to enter firmware update window. This window is used to update firmware.Normally this mode is not advised to use without guiding by manufacturer.

Touch Calibration: Press this button to enter touch calibration window. It will restart HMI automatically after calibration successful. There is a timer in this button, it will enter application window if there is no operation within 20s.

Stop timer: Press this button to stop the 20s timer.